

# Voting Instructions for the ICX



- 1) Insert your **VOTER** card in the yellow activation slot.
- 2) Touch "**Next**" (bottom right) and ballot will appear.
- 3) Vote for your choices by touching candidate(s) you wish to vote for.
  - Deselect candidates by touching the checkmark by their name.
- 4) Continue through ballot by pressing "**Next**" (bottom right).
- 5) At end of ballot, touch "**Review**" (bottom right).
- 6) Review contests and choices on screen.
- 7) If all looks good, touch "**Print Ballot**".
- 8) Touch "**Cast your ballot**".
  - Touch "**Print next page**" if prompted.
- 9) Review contests and choices on paper trail.
- 10) If satisfied, touch "**Accept Ballot**".
  - If changes need to be made, touch "**Reject Ballot**" and return to the ballot to make changes.
- 11) **POLLWORKER to remove VOTER card and retain.**